



## Passage Function in Passage Mode

- Outside lever always free
- Entry by operating lever, no code or key required.
- Inside lever always free

Storeroom / Gate Function

• Entry by code or key only Inside lever always free

Outside lever always locked