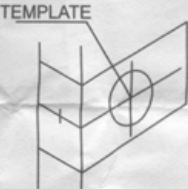

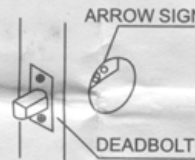
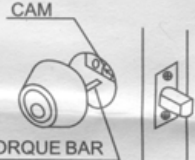
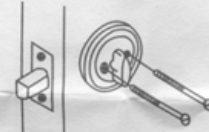
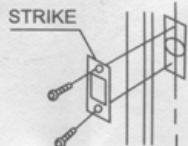

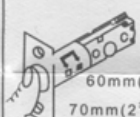
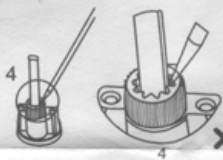


HOW TO INSTALL THIS DEADBOLT

<p>1 MARK DOOR</p>  <p>TEMPLATE</p> <ul style="list-style-type: none"> • Fold template over edge of door and mark the drill points. 	<p>2 BORE HOLES</p>  <p>BASE</p> <p>HOLE</p> <ul style="list-style-type: none"> • Bore the holes through door. •• Cut out base for the latch face 	<p>3 INSTALL DEADBOLT</p>  <p>ARROW SIGN</p> <p>DEADBOLT</p> <ul style="list-style-type: none"> • Keeping the arrow sign in position upward. 	<p>4 INSTALL CYLINDER</p>  <p>CAM</p> <p>TORQUE BAR</p> <ul style="list-style-type: none"> • Keeping cylinder torque bar horizontally and insert into cam slot. 	<p>5 ATTACH INSIDE TRIM</p> 
<p>6 INSTALL STRIKE PLATE</p>  <p>STRIKE</p> <p>Centerline of door thickness</p>	<p>DOUBLE CYLINDER</p> <ul style="list-style-type: none"> • PREPARE DOOR EXACTLY AS IN STEPS 1, 2, 3 AND 4 ABOVE. •• INSTALL INSIDE CYLINDER Keeping cylinder torque bar vertically and insert into cam slot. •• SAME AS STEP 4 ABOVE. 	<p>INSTRUCTION FOR ADJUSTABLE BACKSET</p> <p>Press the end of the deadbolt. Turn the latchcover pull or push make backset become 70mm (2 7/8") or 60mm (2 3/8").</p>  <p>60mm (2 3/8")</p> <p>70mm (2 7/8")</p>	<p>NOTE: DO NOT UNSCREW THE NUT.</p> 	

Limited Lifetime Warranty:

It only covers damage resulting from defects in material or Workmanship, and it does not cover conditions or malfunctions resulting from normal Wear, neglect, abuse, accident or repairs attempted or made by other.

