


Teiber

CHIMES & VENTS **by Craftmade**

Touch-button Install Guide

1. Connect two wires, one to each terminal on button. After the touch-button has been wired. The bracket needs to be installed into the wall using the screws provided.
2. The cover is installed by inserting the top wing of the bracket into the notch inside the top of the cover.
3. Push the cover flush with the wall and using a small flathead screwdriver insert the set screw at the bottom of the housing.

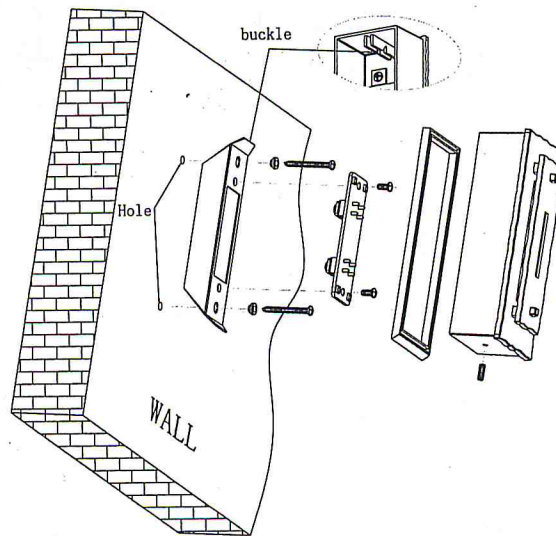

Note: If the chime triggers after touching any surface other than the touch-button, the customer should look for any metal touching any part of the touch-button and to cover that location on the touch-button with a piece of electrical tape.