


SCALE 1:1

2839-TEMPLATE

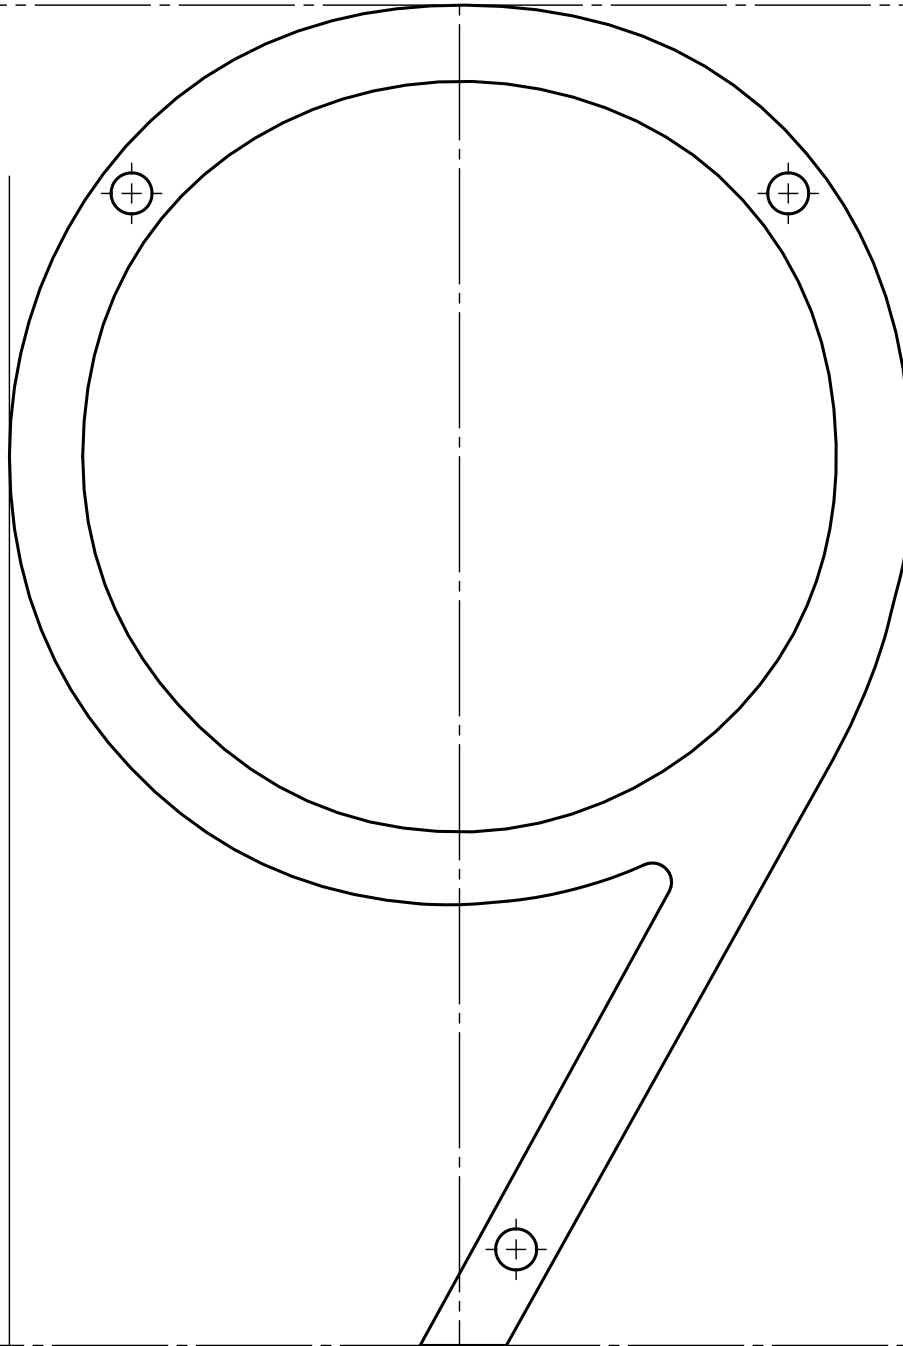


1/2"

1/2"



1/2"

Modern House Number Installation Instructions

Surface

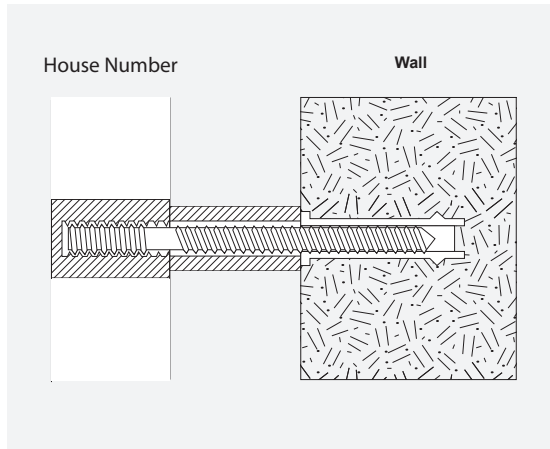


Use 1/4" drill bit for wall anchors.

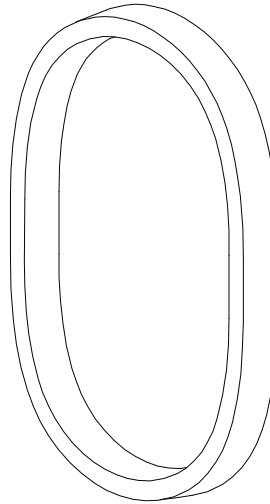

Floating Mount


- Install with threaded rods, standoffs and anchors



Flush Mount


- Install with threaded rods and anchors

Thru-Bolt

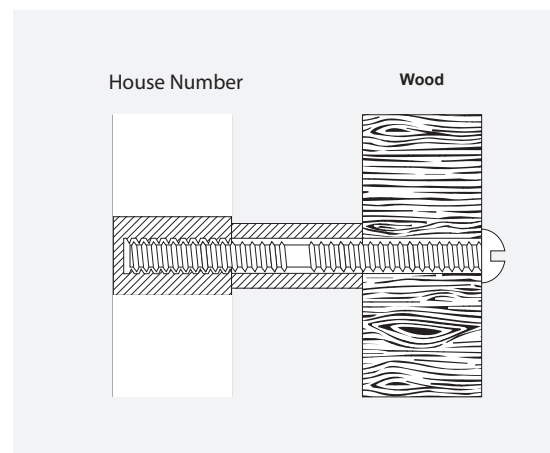

#8-32 Breakaway screws provide for easy shortening.

Use 3/16" drill bit for breakaway screws.

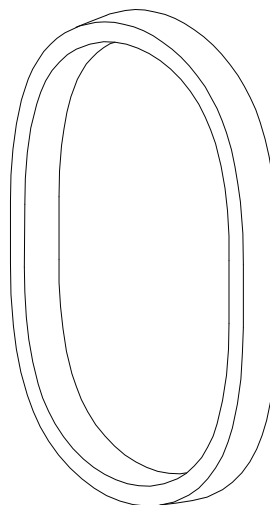

Floating Mount

- Install with standoffs and breakaway screws



Flush Mount

- Install with breakaway screws