



POCKET DOOR MORTISE HOLE PREPARATION

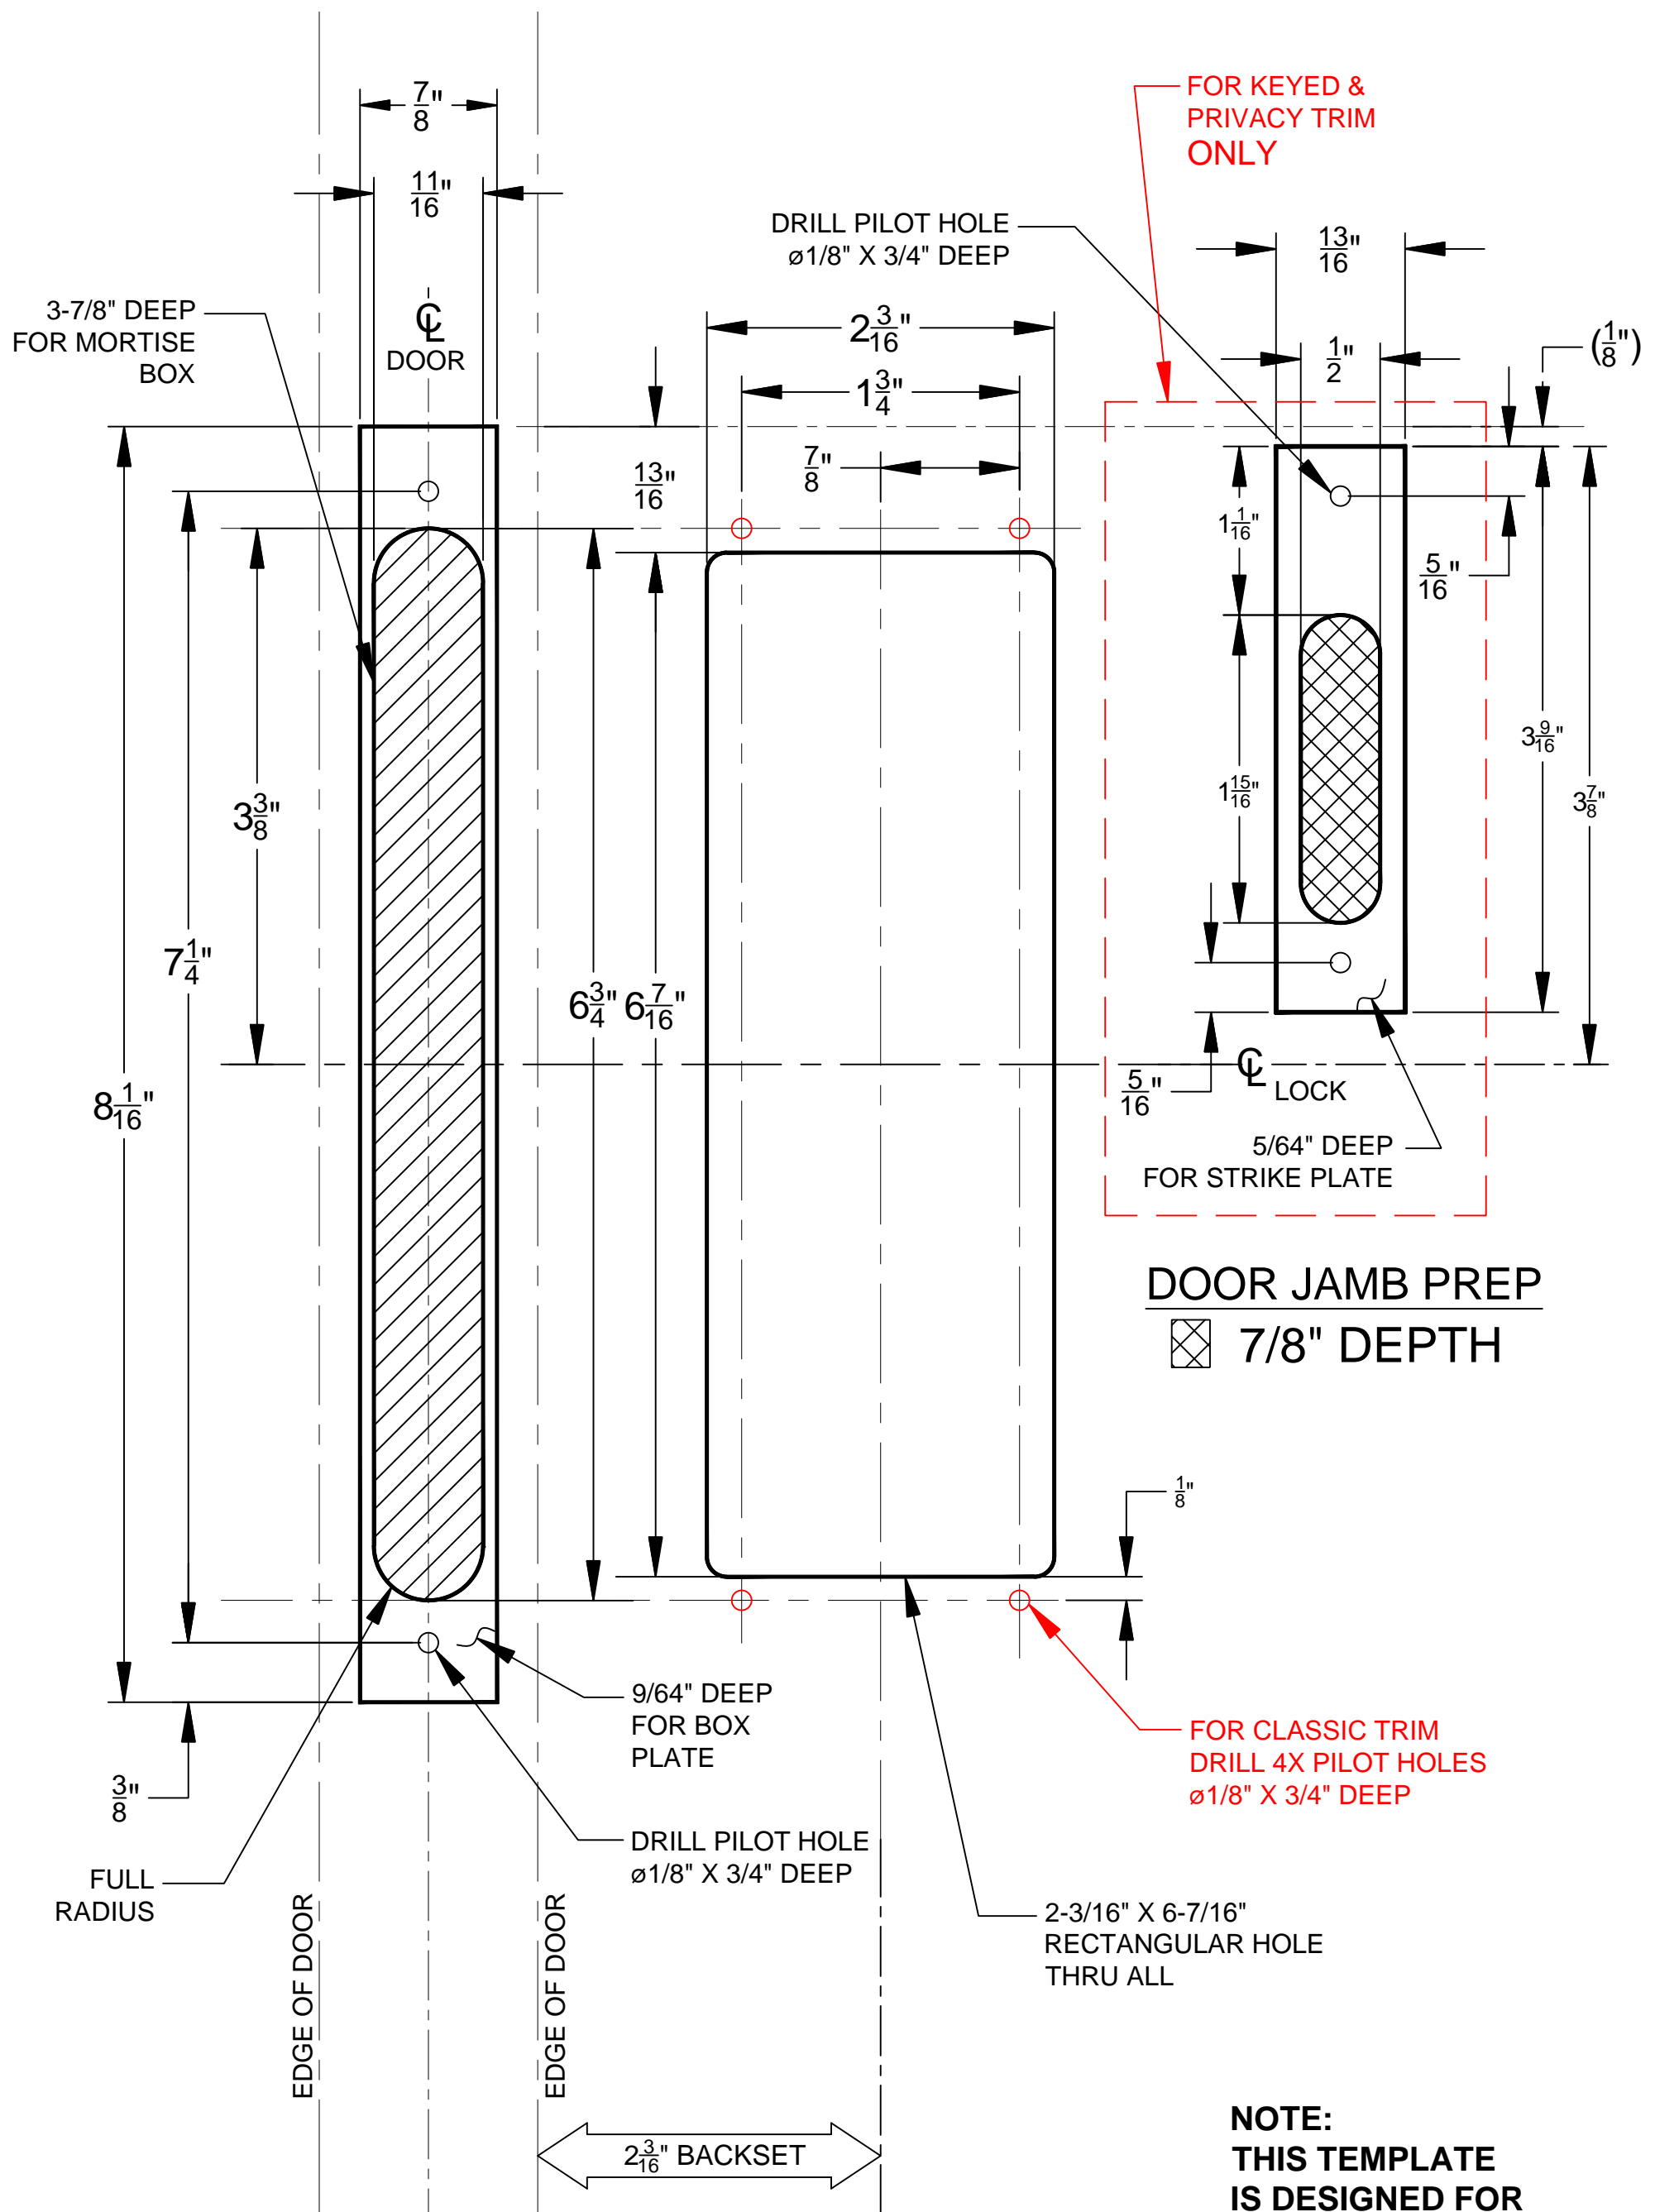


*** NOTE: 8-1/2" X 11" COPY OF THIS
TEMPLATE NOT TO SCALE.**

**NOTE:
THIS TEMPLATE
IS DESIGNED FOR
1-3/8" THICK DOOR.**


1 Install Lock Body

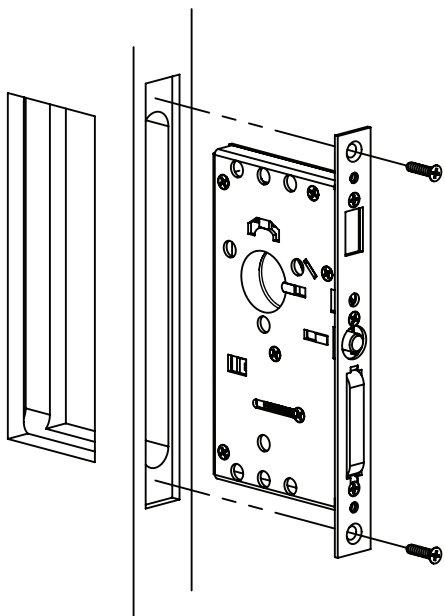

2 Hold Outside plate in place

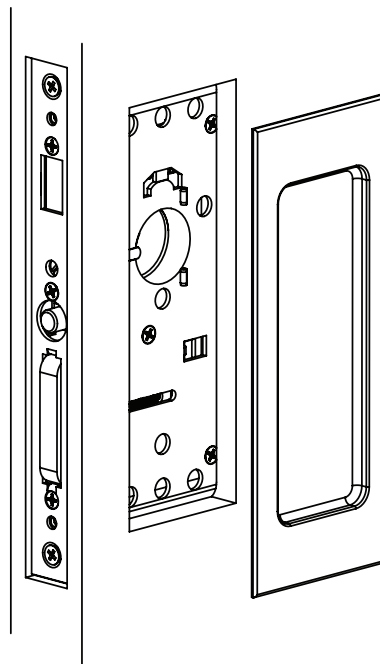

3 Secure both inside & outside plates

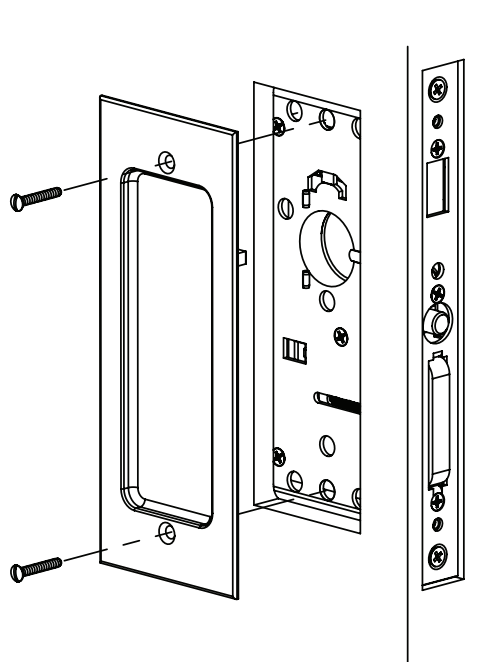

Secure both inside and outside plates using machine screws (provided)

4 Install Trim Plate

