

Tall Plate Door Hardware


Installation Instructions

— For doors with or without a 2-1/8" cross-bore

Double Dummy


A

Determine backset (distance between edge of door and center of tall plate.) Check other doors in the house to determine backset.

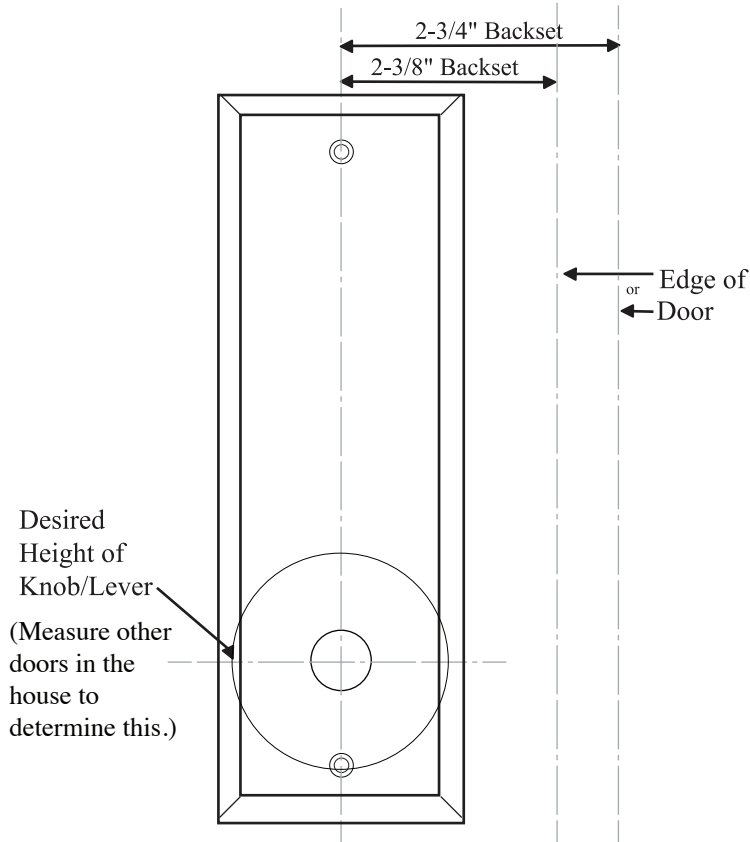


B

Mark the holes

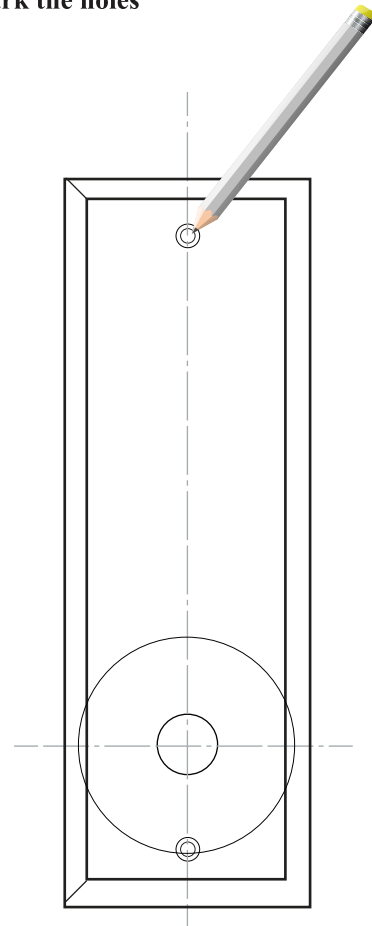

C

Using a 1/4" drill bit, drill the screws through the door.

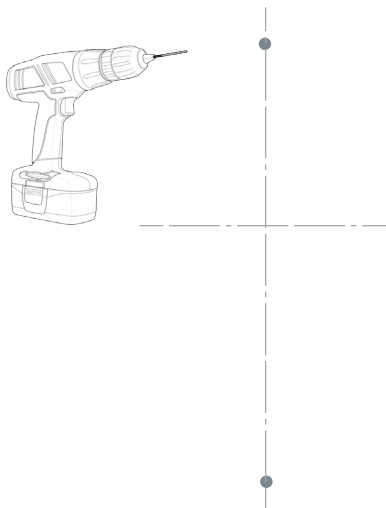


D

Intall screw extenders into exterior tall plate.

Tighten securely.

Place the exterior plate on the outside of the door.


Screw Extenders (part #8)

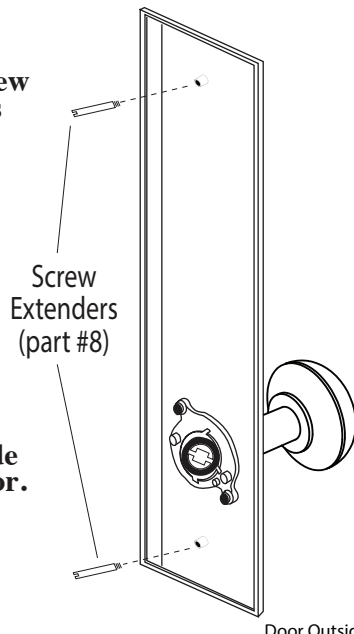

Door Outside

E

Insert the tall plate screws and tighten until snug.

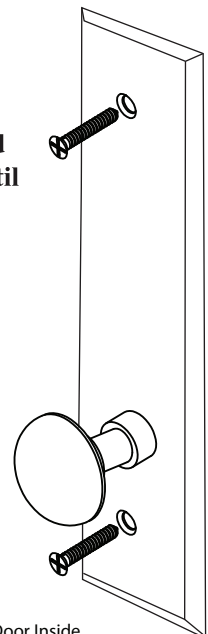

Door Inside